


The Dual Wheel Adapter 5950

The 5950 Dual Wheel Adapter must be used when using the Big Truck Tire Step on Dayton and dual wheels.

This adapter provides extra stability by resting against the tire when there is no rim to rest against. The Dual Wheel Adapter is included with the 5800 Super Single 2-Step and the 5300 Super Single 3-Step.

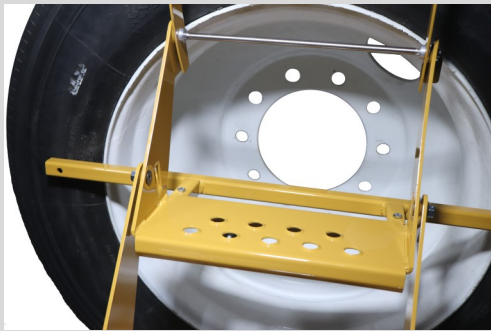


How to Attach the 5950

The Dual Wheel Adapter can be easily attached to any Big Truck Tire Step by sliding the adapter's two attachment posts over the step's rear stabilizing posts. Secure the adapter with the included screws and nuts.

Note: Super Single Model numbers 5800 and 5300 come pre-drilled for the adapter. If using the dual wheel adapter with model numbers 5500 or 5100 you must: 1) Remove vinyl caps. 2) Slide on adapter and mark hole placement. 3) Drill holes in the stabilizing posts. 4) Attach Dual Wheel Adapter.

Warranty

The Big Truck Tire Step is warranted for 1 year against manufacturing defects in workmanship or materials under normal use. Any product which is returned and determined to be defective in material or workmanship will be repaired or replaced.

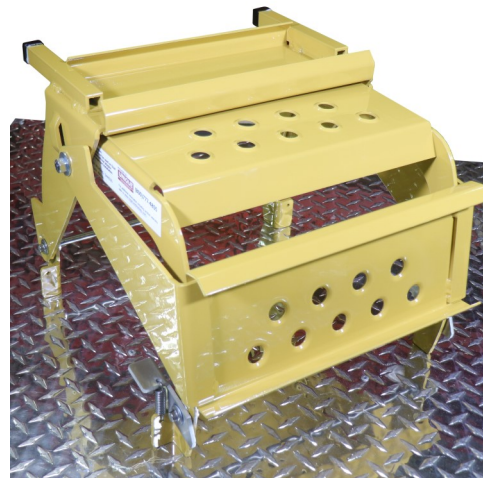

Each step folds up for easy storage when not in use. The 5100 and 5500 Standard Big Truck Tire Steps fold into a space just over a cubic foot and weighs less than 12 pounds.

Address:

Unique Truck Equipment, Inc.
PO Box 8798
Grand Rapids, MI 49518



Phone: (800) 777-4855
Email: Sales@UniqueTruck.com
Web: www.UniqueTruck.com

Patent # D448335 & 6457558



FROM:



www.UniqueTruck.com



Made in U.S.A.



The Big Truck Tire Step is the only tire step that allows you to safely step on the top of the tire. The Big Truck Tire Step is manufactured in the United States by Unique Truck Equipment, Inc.

- Tested to 400 pound capacity
- Spring loaded grips for stability
- Made of quality 3003 aluminum and steel

Placing Step On Tire

First, unfold the tire step with all steps completely down. Place the platform over the top of the tire. With both hands, pull up on each of the spring loaded grips located at the rear bottom of the platform legs. Gently slide the step down until the platform rests securely on top of the tire.


Removing Step From Tire

Starting at the back of the tire, use both hands to pull up on the spring loaded grips located at the rear bottom of the platform legs. Gently pull up. Release the spring loaded grips while the back of the step is partly up the back of the tire. Continue to pull up from the front of the step. If not fully removed, continue alternating pulling from the back to front until removed.

Adjusting Platform Width

(5800 & 5300 Only)

Both super single models feature an adjustable platform to accommodate various widths of tires. Tire sizes include 305, 315, 385, 415, 425, 445 (fits 11.5" to 20" tread width).

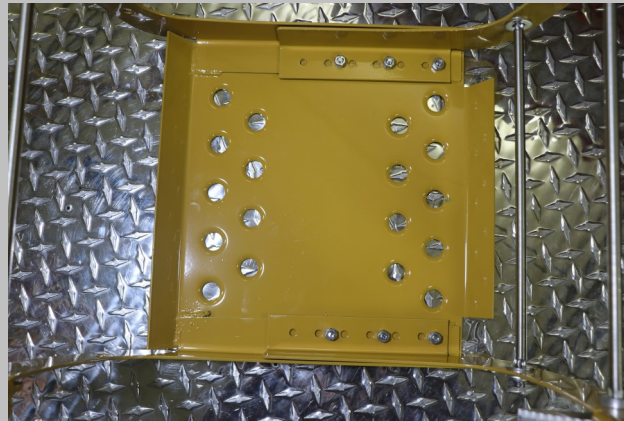

To adjust the platform of the 5800 or 5300, unscrew the 6 screws and nuts. Once the screws are removed, the platform can be adjusted in or out. Once the desired width is achieved, replace the screws and secure them with the included nuts.



Phone: (800) 777-4855
 Email: Sales@UniqueTruck.com
 Web: www.UniqueTruck.com

Available Models

Big Truck Tire Step

Standard 1-Step

Part # 5100



Big Truck Tire Step

Standard 2-Step

Part # 5500

Big Truck Tire Step

Super Single 2-Step

Part # 5800



Big Truck Tire Step

Super Single 3-Step

Part # 5300